



Poly Studio E60 User Guide

SUMMARY

This guide provides end-users with task-based user information for the named product.

Legal information

Copyright and license

© 2024, HP Development Company, L.P. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Trademark credits

All third-party trademarks are the property of their respective owners.

Privacy policy

HP complies with applicable data privacy and protection laws and regulations. HP products and services process customer data in a manner consistent with the HP Privacy Policy. Please refer to [HP Privacy Statement](#).

Open source software used in this product

This product contains open source software. You may receive the open source software from HP up to three (3) years after the distribution date of the applicable product or software at a charge not greater than the cost to HP of shipping or distributing the software to you. To receive software information, as well as the open source software code used in this product, contact HP by email at ipgoopensourceinfo@hp.com.

Table of contents

1 About this guide	1
Audience, purpose, and required skills	1
Icons used in Poly documentation	1
2 Getting started	2
Setting up Poly Studio E60	3
In the box	3
Set up your Poly Studio E60 camera using a USB cable	3
Set up your Poly Studio E60 camera as an IP camera	4
Computer and cable requirements	4
Poly Studio E60 overview	5
Poly Studio E60 hardware features	5
Poly Studio E60 LED indicators	6
Use the Poly Studio E60 privacy cover	7
Basic tips for great video conferences	7
Advanced tips for great video conferences	8
Find the Poly Studio E60 serial number	9
Poly Studio E60 accessibility features	9
3 Using Poly Studio E60	10
Using the Poly Studio E60 system web interface	10
Set Poly Studio E60 as the default video device	10
Tracking modes	10
Updating software	11
Restart your device	11
Using the remote control	12
Poly Studio E60 remote control features	12
Change the Poly Studio E60 remote control batteries	13
4 Getting help	14
HP Inc. addresses	14
Document information	14

1 About this guide

This guide describes how to use the Poly Studio E60 camera.

Audience, purpose, and required skills

This guide is intended for beginning users, as well as intermediate and advanced users, who want to learn more about the features available with their Poly Studio E60 camera.

Icons used in Poly documentation

This section describes the icons used in Poly Documentation and what they mean.

-
-  **WARNING!** Indicates a hazardous situation that, if not avoided, **could** result in serious injury or death.
 -  **CAUTION:** Indicates a hazardous situation that, if not avoided, **could** result in minor or moderate injury.
 -  **IMPORTANT:** Indicates information considered important but not hazard-related (for example, messages related to property damage). Warns the user that failure to follow a procedure exactly as described could result in loss of data or in damage to hardware or software. Also contains essential information to explain a concept or to complete a task.
 -  **NOTE:** Contains additional information to emphasize or supplement important points of the main text.
 -  **TIP:** Provides helpful hints for completing a task.
-

2 Getting started

The Poly Studio E60 is a mechanical PTZ camera that brings high quality video to large meeting rooms.

Setting up Poly Studio E60

This section provides information on how to set up your Poly Studio E60 camera.

In the box

Make sure you have the standard shipped items when you open the box.



NOTE: You can purchase optional accessories kits separately.


The Poly Studio E60 camera ships with the following items in the box as standard:

- Poly Studio E60 camera
- Privacy cover
- USB 3.0 Type-B to USB Type-A cable
- 5M CAT6 PoE network cable
- Wall mounting bracket kit
- Poly remote control

Set up your Poly Studio E60 camera using a USB cable

Set up your Poly Studio E60 camera and initialize it to start using it.

Figure 2-1 Connecting Poly Studio E60 to a video conferencing system

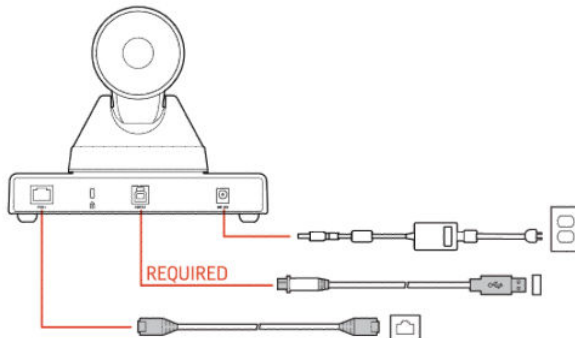

1. Connect your Poly Studio E60 camera to the system using the provided USB 3.0 Type-B to USB 3.0 Type-A cable.



IMPORTANT: Using a third-party USB Type-B to USB Type-A cable may affect device performance, or your device may not work at all.

2. Supply power to the camera using one of the following options:
 - Connect a network cable from the PoE+ port on the camera to an Ethernet port on your system.
 - Connect a Poly power adapter (available to purchase separately) from the 12 V DC power port on the rear panel of the camera to a power source.

The **Power** LED on the front panel of the camera flashes white. The **Standby** LED glows solid orange.

The camera initializes. The camera head rotates to face the room. The power indicator LED glows solid white and the standby LED glows solid orange. When the camera stops moving, initialization is complete.

Set up your Poly Studio E60 camera as an IP camera

Set up your Poly Studio E60 camera as an IP LLN camera with certain Poly video conferencing systems.

Your camera must be running software 1.1 or later, and your video conferencing system must be running Poly VideoOS 4.4.0 or later to use this feature. If your devices are running earlier software, you must first update the software before you can complete this procedure. For more information, refer to your product release notes.

This procedure describes setting up the Poly Studio E60 camera as an IP LLN camera for the first time. For up-to-date details of supported systems, configurations, and video conferencing providers, refer to the [Poly Partner Mode Administrator Guide](#).

1. Supply power to the camera using one of the following options:

- Connect a network cable from the PoE+ port on the camera to an Ethernet port on your system.
- Connect a Poly power adapter (available to purchase separately) from the 12 V DC power port on the rear panel of the camera to a power source.

If applicable, a firmware update begins. The standby LED blinks orange during this process.

2. Connect your video conferencing system to the IP LLN.
3. Connect the Poly Studio E60 camera to an approved module room switch connected to the video conferencing system.
4. Pair the Poly Studio E60 using the system web interface of the video conferencing system.

The **Power** LED on the front panel of the camera flashes white while pairing. When the LED glows solid white, the camera is paired.

Computer and cable requirements

Make sure that your system and USB cable meet the following requirements to use Poly Studio E60 as the camera accessory.

Your system must have one of the following operating systems:

- Windows 11 or Windows 10
- macOS versions 14 (Sonoma), 13 (Ventura), or 12 (Monterey)

The Poly Studio E60 camera only supports the USB cable that comes with your system.

 **IMPORTANT:** Using a third-party USB Type-B to USB Type-A cable may affect device performance, or your device may not work at all.

Poly Studio E60 overview

Poly Studio E60 is an MPTZ camera with 12x optical zoom and AI-driven presenter tracking.

Poly Studio E60 includes the following features:

- 12x optical zoom and 16x digital zoom MPTZ camera and resolution up to 4K.
- Vertical field of view (VFOV) of 43 degrees and a horizontal field of view (HFOV) of 71 degrees.
- Poly DirectorAI, which includes presenter tracking and group framing.
 - Presenter tracking keeps presenter center-stage as they move freely around the room.
 - Group framing frames the entire group on screen and removes excess wasted space.
- Connects to Poly Android and Windows-based video systems.
- Certification by multiple platforms phase by phase (see latest Data Sheet for details).

Poly Studio E60 hardware features

The following figures and tables explain the hardware features on the Poly Studio E60 camera.

Figure 2-2 Front view of the Poly Studio E60 camera

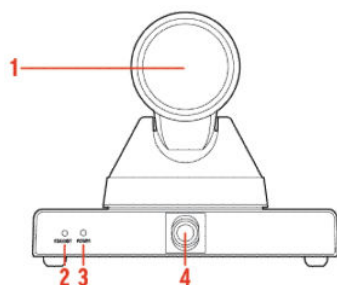


Table 2-1 Poly Studio E60 feature descriptions (front)

Reference number	Feature	Feature description
1	Optical zoom lens	Optical zoom lens with 12× optical and 16× digital zoom with a removable privacy cap
2	Standby LED indicator	Indicates device status
3	Power LED indicator	Indicates device status
4	AI lens	The fixed AI lens is used to detect participants within its 107 degree field of view to trigger optical zoom lens to track people in the room.

Figure 2-3 Back view of the Poly Studio E60 camera

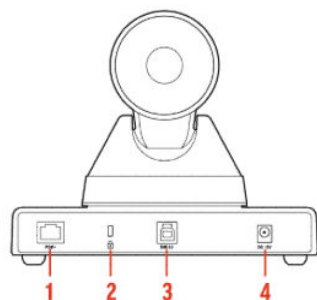


Table 2-2 Poly Studio E60 feature descriptions (back)

Reference number	Feature	Feature description
1	Power over Ethernet+ (PoE+) port	Powers your Poly Studio E60 camera
2	Kensington security slot	Secures your device with a Kensington lock (not provided)
3	USB 3.0 Type-B port	Connects the camera to the video conferencing system or PC using a USB 3.0 Type-B to USB 3.0 Type-A cable
4	12 V DC power port	Connects the camera to a power source using an optional power cable (available separately)

Poly Studio E60 LED indicators

Your device provides two LED status indicators below the camera to help you understand the device's behaviors. The **Power** LED is white and the **Standby** LED is orange.

The following table lists the LED status details.

Table 2-3 Poly Studio E60 LED behaviors

Standby LED behavior	Power LED behavior	Device status
No color	No color	Device is powered off Camera faces the wall
No color	Flashing white	Device is starting up Camera faces the wall
No color	Solid white	Device is powered on and awake Camera faces the room
Solid orange	No color	Device is in standby mode Camera faces the wall
Flashing orange	No color	Firmware is updating Camera faces the wall


Table 2-3 Poly Studio E60 LED behaviors (continued)

Standby LED behavior	Power LED behavior	Device status
No color	Flashing white	Camera is pairing with a video conferencing system Camera faces the room

Use the Poly Studio E60 privacy cover

The Poly Studio E60 camera comes with a physical cover that blocks the camera lens to protect your privacy.

Figure 2-4 Poly Studio E60 privacy cover

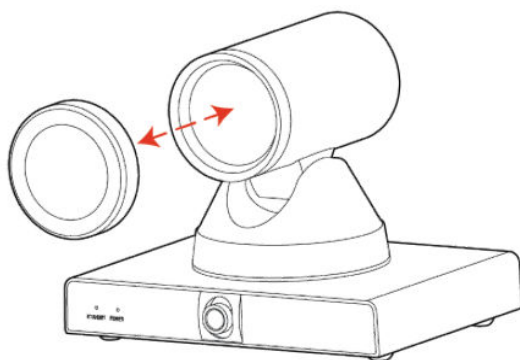


1. Manually remove the privacy cover before starting your video conference to show your video.
2. **Optional:** Replace the privacy cover to cover the camera lens when not in use.

Basic tips for great video conferences

Use the following basic tips and guidelines to enhance or improve your experiences during video conferences.

- Mount and position the camera so that your eyes are level with the top third of your screen and your face appears in the middle area of the video stream.

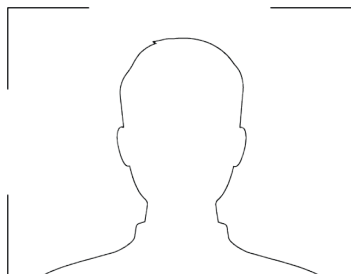


- Avoid wearing bright colors, all-light or all-dark clothing, or very busy patterns like small checks or narrow stripes. Light pastels and muted colors look the best on the screen.
- Preview your video stream before you join a meeting to make sure that you don't have shadows on your face and that your camera settings are configured correctly.
- Speak in your normal voice.

Advanced tips for great video conferences

Use the following basic tips and guidelines to enhance or improve your experiences during video conferences.

Camera and People Positioning

- Try not to fidget too much, especially if you're the only one on camera.
- Include all the people in the room (if possible), or introduce everyone in the room at the beginning of a meeting.

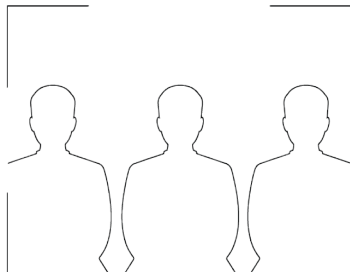

- Keep the view focused on people and not the background or room furnishings.
- In an office, position the monitor to an appropriate angle to avoid capturing potential distractions in your video (for example, other people, pets, or TVs).

Clothing, Furnishings, and Backgrounds

- To avoid disruptions, exclude the following from the camera view: light sources, tables, chairs, walls, busy decorations, and the floor.
- To avoid funny effects, wear clothes that contrast with the background instead of blending into it and make sure nothing in the background seems to stick out of anyone's head.
- Avoid glossy tabletops, strong colors, or bold wood grain in the room. The best table surface color is a flat satin finish in neutral gray.
- A wall that's painted light gray with a touch of blue works best as a background. Video conferencing systems use a gray or blue reference image to process the video, so a background in that color helps to enhance the video you send.
- Try to keep dry-erase whiteboards out of the camera field of view. Be aware that other people in the meeting might see what's written on the whiteboards.

Lighting

- Close any curtains, drapes, or blinds over your windows. Daylight is a variable light source and can conflict with interior room lighting.
- Bright lighting increases the range of in-focus objects, but inappropriate direct lighting might make you look harsh or somber. Poly recommends using indirect fluorescent lighting in a midrange, neutral color temperature (3600 K to 4500 K). You can find the color temperature of your lighting on the packaging.

Audio and Noise

- Mute your audio when you're silent or before you move your audio device.
- Keep your windows and doors closed to minimize unwanted noises.
- Close any drapes or blinds over your windows. The glass from windowpanes can cause issues with acoustics due to reflection.

Find the Poly Studio E60 serial number

You can find the serial number for the Poly Studio E60 on the base of the unit. It starts with the letters S/N.

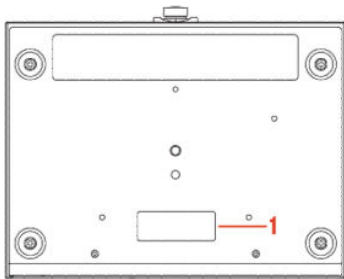


Table 2-4 Serial number location on Poly Studio E60

Callout	Feature
1	Serial number label

Poly Studio E60 accessibility features

Poly Studio E60 includes a number of features to accommodate users with disabilities.

Table 2-5 Poly Studio E60 accessibility features

Accessibility feature	Description
Visual notifications	LED indicators let you know when status changes and functions work.
71-degree field of view	The wide view captures your movements without needing to adjust the camera.
Tactile buttons	The mechanical buttons on the optional remote control provide visual contrast to enable you to control the system.

3 Using Poly Studio E60

Connect the Poly Studio E60 camera to your system to begin using it.

Using the Poly Studio E60 system web interface

Configure settings for your environment in the Poly Studio E60 camera's system web interface.

For information on using the Poly Studio E60 system web interface, refer to the [Poly Studio E60 System Web Interface User Guide](#).

Set Poly Studio E60 as the default video device

When you use the Poly Studio E60 camera with a supported application for video calls, you may need to set the device as the default video device of your application.

The following is a general procedure that you can use. Your application may use different terms or categories.

1. Go to your conferencing application's **Settings**.
2. Find **Video Device**.
3. Choose your Poly Studio E60 camera as the video device.

Tracking modes

Set the camera tracking mode which best suits your environment.

Poly Studio E60 supports the following tracking modes:

- **Presenter tracking:** Keeps the presenter center-stage as they move freely around the room.
- **Group framing:** Frames the entire group on screen and removes excess wasted space.

If you are using the Poly Studio E60 with a supported Poly video conferencing system, you can use the system web interface of that system to access configuration settings to change or disable some of these features for Poly Studio E60. For information on using supported Poly systems, refer to the [Poly Partner Mode Administrator Guide](#) or [Poly Video Mode Administrator Guide](#).

If you are using the Poly Studio E60 with a laptop, you must use the Poly Studio E60 system web interface to manage settings. For information on using the Poly Studio E60 system web interface, refer to the [Poly Studio E60 System Web Interface User Guide](#).

Updating software

Depending on your individual setup, you have a specific software update path.

If you are using the Poly Studio E60 camera with a PC, updates are pushed automatically from Windows Update as driver updates.

When using an Android-based video system, software updates for the Poly Studio E60 camera are handled through the connected video conferencing system. Refer to the [Poly Documentation Library](#) to view user documentation for your relevant system.

While the software updates, the **Standby** LED indicator glows solid orange and the **Power** LED indicator flashes white.

Restart your device

If you encounter issues with your device, you can manually restart it.

- Unplug the PoE+ network cable or the DC power cable and plug it back in.

You may need to reselect the device as the default video device for your video conferencing application.

Using the remote control

You can use the remote control to adjust your Poly Studio E60 camera and manage other features when using it with a laptop.

 **NOTE:** If you are using the Poly Studio E60 with an Android system, you should manage settings by using a touch controller or the relevant codec's remote control.

If you are using the Poly Studio E60 with a PC-based room solution, you should manage settings by using the native camera control options for your setup.

Poly Studio E60 remote control features

Poly Studio E60 supports a remote control.

Figure 3-1 Poly Studio E60 remote control

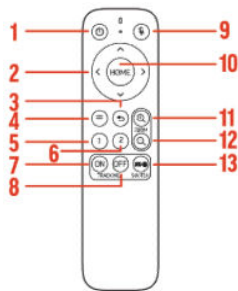


Table 3-1 Parts of the Poly Studio E60 remote control

Reference number	Button name	Feature description
1	Standby	Turns the device on or off or wakes it up
2	Direction	Adjusts the menu cursor and menu parameters
3	Return	Returns to the upper level of the menu
4	Menu	Opens or exits the menu
5	No. 1 preset	Sets a preset camera position: - Long press for 3 seconds to set the preset position - Short press to adjust the preset position
6	No. 2 preset	Sets a preset camera position: - Long press for 3 seconds to set the preset position - Short press to adjust the preset position
7	Tracking on	Turns on tracking NOTE: Press the Switch button first.
8	Tracking off	Turns off tracking


Table 3-1 Parts of the Poly Studio E60 remote control (continued)

Reference number	Button name	Feature description
9	Mute	This feature is disabled
10	Home	Restores the maximum angle of view without using the Zoom button When menu is open, confirms menu selections and enters the submenu
11	Zoom +	Digital zoom in NOTE: Zoom is not supported when the tracking function or automatic frame selection function is turned on.
12	Zoom -	Digital zoom out NOTE: Zoom is not supported when the tracking function or automatic frame selection function is turned on.
13	Switch	Switches tracking functions

Change the Poly Studio E60 remote control batteries

Change the Poly Studio E60 remote control batteries to ensure it continues to work properly.

Figure 3-2 Changing the Poly remote control batteries

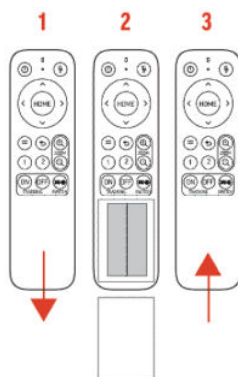

1. Apply pressure to the front of the remote control and slide the battery cover down.
2. Replace the AAA batteries.
3. Replace the battery cover by sliding it up and firmly into place.

4 Getting help

Poly is now a part of HP. The joining of Poly and HP paves the way for us to create the hybrid work experiences of the future. Information about Poly products has transitioned from the Poly Support site to the HP Support site.

The [Poly Documentation Library](#) is continuing to host the installation, configuration/administration, and user guides for Poly products in HTML and PDF format. In addition, the Poly Documentation Library provides Poly customers with information about the transition of Poly content from Poly Support to [HP Support](#).

The [HP Community](#) provides additional tips and solutions from other HP product users.

HP Inc. addresses

HP US

HP Inc.
1501 Page Mill Road
Palo Alto 94304, U.S.A.
650-857-1501

HP Germany

HP Deutschland GmbH
HP HQ-TRE
71025 Boeblingen, Germany

HP UK

HP Inc UK Ltd
Regulatory Enquiries, Earley West
300 Thames Valley Park Drive
Reading, RG6 1PT
United Kingdom

Document information

Model ID: Poly Studio E60 (RMN: PBJ-E60-001)

Document part number: 3725-88724-004A

Last update: November 2024

Email us at documentation.feedback@hp.com with queries or suggestions related to this document.